

Stand-alone HF Motion Sensor





HMW23

Tri-level Control for System DALI

HYTRONIK®

Mechanical Structure

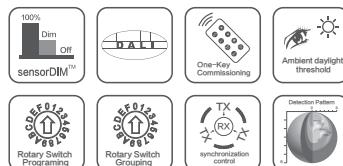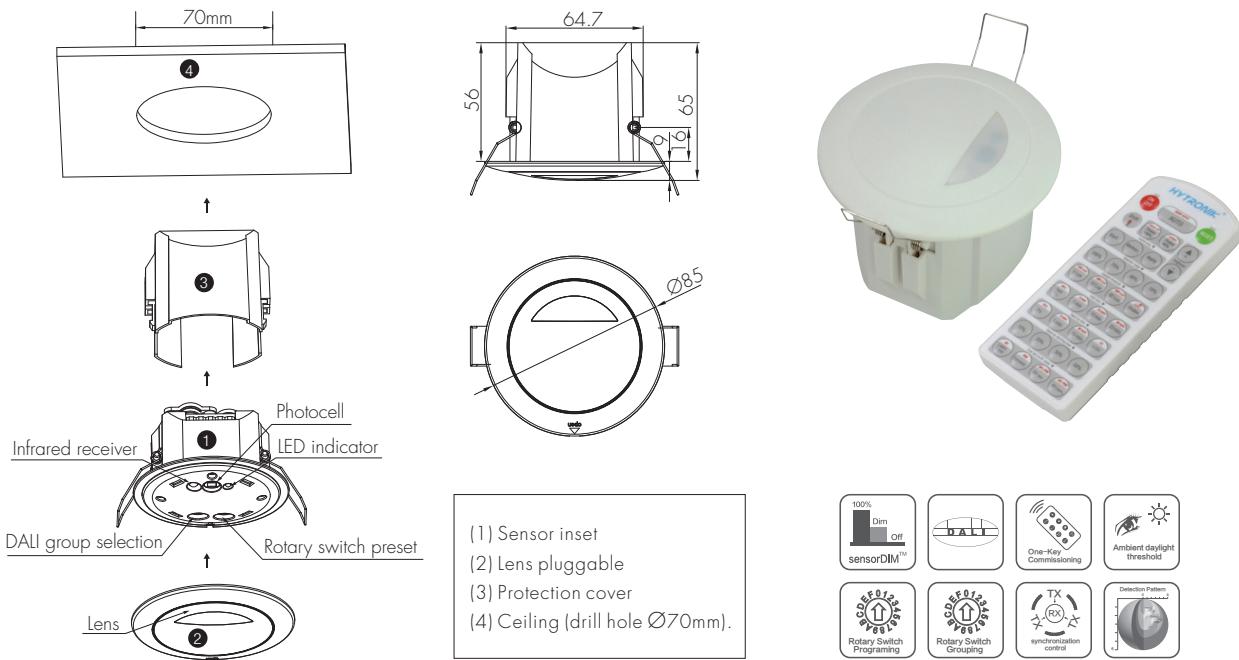

Technical Data

Input Characteristics

| Model No. | HMW23 |
|-------------------|---------------|
| Operating voltage | 9.5 ~ 22.5VDC |
| Stand-by power | <0.5W |
| Input current | Approx. 12mA |
| Warming-up | 20s |

Sensor Data

| Model No. | HMW23 |
|---------------------|----------------------------|
| Sensor principle | High Frequency (microwave) |
| Operation frequency | 5.8GHz +/- 75MHz |
| Transmission power | <0.2mW |
| Detection range | Max. (Ø x H) 12m x 6m |
| Detection angle | 360° |

Safety and EMC

| | |
|-----------------------|------------------------------|
| EMC standard (EMC) | EN55015, EN61000 |
| Safety standard (LVD) | EN60669, AS/NZS60669 |
| Radio Equipment (RED) | EN300440, EN301489, EN62479 |
| Certification | Semko, CB, CE, EMC, RED, SAA |

Environment

| | |
|-----------------------|--------------------------------|
| Operation temperature | T _a : -20°C ~ +60°C |
| IP rating | IP20 |

CE RED CB IP20

This DALI sensor is designed for incorporation in the DALI system, taking command from the DALI master, accepting and carrying out the grouping work with up to 64 luminaires. It can switch on/off, or dim the assigned group members and feed back the status to the DALI master.


Functions and Features

1 Tri-level Control (Corridor Function)


Hytronik builds this function inside the motion sensor to achieve tri-level control, for some areas which require a light change notice before switch-off. The sensor offers 3 levels of light: 100%→dimmed light →off; and 2 periods of selectable waiting time: motion hold-time and stand-by period; Selectable daylight threshold and freedom of detection area.



With sufficient natural light, the light does not switch on when presence is detected.

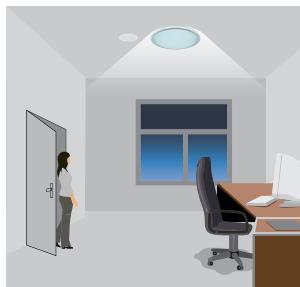

With insufficient natural light, the sensor switches on the light automatically when presence is detected.

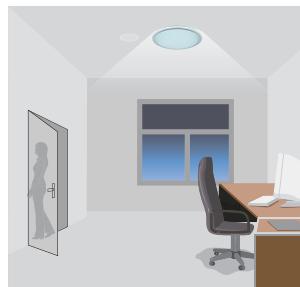

After hold-time, the light dims to stand-by level.



Light switches off automatically after the stand-by period elapses.

2 Synchronisation Function

By connecting the DALI terminals in parallel (see wiring diagram), no matter which sensor detects motion, all HMW23 in the group will turn on the lights when surrounding natural light is below the daylight threshold. The detection area could be widely enlarged in this way.

DALI Grouping Selection

DALI group configuration can be done either on PC, or on the rotary coding switch:


- There are 16 channels available on the rotary switch. "0" is for DALI broadcast, the rest 15 channels are for end-user to define the application unit.
 - PC grouping can overwrite rotary switch grouping, and vice versa. The last setting controls.
- The rotary switch channels are corresponding to the groups listed below:



| Switch channel | DALI group | Switch channel | DALI group |
|----------------|------------|----------------|------------|
| 0 | broadcast | 8 | group 7 |
| 1 | group 0 | 9 | group 8 |
| 2 | group 1 | A | group 9 |
| 3 | group 2 | B | group 10 |
| 4 | group 3 | C | group 11 |
| 5 | group 4 | D | group 12 |
| 6 | group 5 | E | group 13 |
| 7 | group 6 | F | group 14 |

Rotary Switch Preset

A rotary switch is built inside the sensor for scene selection / fast programming. Total 16 channels are available:

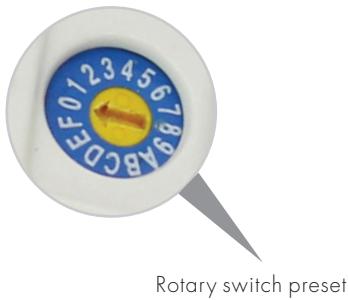

Note: settings can also be changed by remote control HRC-11. The last action controls.

| Channel | Detection range | Hold-time | Daylight sensor | Stand-by time | Stand-by dim level |
|---------|-----------------|-----------|-----------------|---------------|--------------------|
| 0 | 100% | 5s | Disable | 10s | 10% |
| 1 | 100% | 1min | 2Lux | 5min | 10% |
| 2 | 100% | 5min | 10Lux | 10min | 10% |
| 3 | 100% | 5min | 30Lux | 30min | 10% |
| 4 | 100% | 5min | 10Lux | 0s | Disable |
| 5 | 100% | 5min | 30Lux | +∞ | 10% |
| 6 | 100% | 5min | Disable | +∞ | 30% |
| 7 | 100% | 10min | 2Lux | 10min | 10% |
| 8 | 100% | 10min | 10Lux | 30min | 10% |
| 9 | 100% | 10min | 30Lux | +∞ | 10% |
| A | 100% | 10min | Disable | +∞ | 30% |
| B | 75% | 10min | 30Lux | +∞ | 10% |
| C | 50% | 10min | 10Lux | +∞ | 10% |
| D | 100% | 30min | 50Lux | +∞ | 10% |
| E | 100% | 30min | Disable | +∞ | 30% |
| F | 100% | 5s | 2Lux | 10s | 10% |

Settings (Remote Control HRC-11)



Press button "ON/OFF" to select permanent ON or permanent OFF mode.
* Press button "AUTO", "RESET" to quit this mode.



Press button "RESET", all settings go back to rotary switch settings.



Press button "Shift", the LED on the top left corner will flash to indicate mode selection. All values / settings in RED are valid for 20 seconds.




Press button "AUTO" to initiate automatic mode. The sensor starts working and all settings remain as before the light is switched ON/OFF.

Note: the function of Semi-auto is disabled.



Press the buttons to select light output at 80% (at initial 10,000 hours) or 100%.

Note: "Sensor off" and "Twilight" functions are disabled.

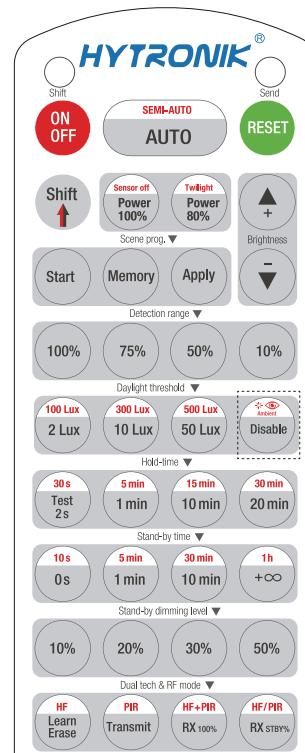

HRC-11



Brightness +/-

Press the buttons to adjust the light brightness during hold-time.



Scene program - 1-key commissioning

1. Press button "Start" to program.
2. Select the buttons in "Detection range", "Daylight threshold", "Hold-time", "Stand-by time", "Stand-by dimming level" to set all parameters.
3. Press button "Memory" to save all the settings programmed in the remote control.
4. Press button "Apply" to set the settings to each sensor unit(s).

*For example, to set detection range 100%, daylight threshold Disable, hold-time 5min, stand-by time +∞, stand-by dimming level 30%, the steps should be:
Press button "Start", button "100%", "Disable", "Shift", "5min", "Shift", "+∞", "30%", "Memory". By pointing to the sensor unit(s) and pressing "Apply", all settings are passed on the sensor(s).*

Detection range

Press buttons in zone "Detection range" to set detection range at 100% / 75% / 50% / 10%.

Daylight threshold

Press buttons in zone " Daylight threshold" to set daylight sensor at 2Lux/ 10Lux / 50Lux / Disable.

Note: 100Lux / 300Lux / 500Lux are disabled.

Ambient daylight threshold

1. Press button "Shift", the red LED starts to flash.

2. Press button "Ambient", the surrounding lux level is sampled and set as the new daylight threshold.

Hold-time

Press buttons in zone "hold-time" to set the hold-time at 2s / 30s / 1min / 5min / 10min / 15min / 20min / 30min.

Note: 1. To set hold-time at 30s / 5min / 15min / 30min, press "Shift" button first.

2. 2s is for testing purpose only, stand-by period and daylight sensor settings are disabled in this mode.

*To exit from Test mode, press button "RESET" or any button in "Hold-time".

Stand-by time (corridor function)

Press buttons in zone "stand-by time" to set the stand-by period at 0s / 10s / 1min / 5min / 10min / 30min / 1h / +∞.

Note: "0s" means on/off control; "+∞" means bi-level control, the fixture is 100% on when there is motion detected, and remains at the stand-by dimming level when no presence after motion hold-time.


Stand-by dimming level

Press the button in zone "stand-by dimming level" to set the stand-by dimming level at 10% / 20% / 30% / 50%.

Dual tech & RF mode

All buttons are disabled.

Wiring Diagram

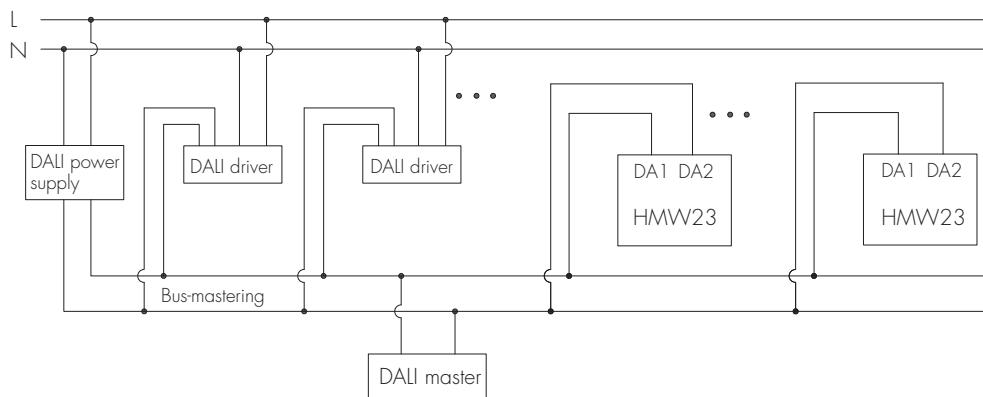

Detection Pattern

